

Ascent Assembly on site Ascent Series






Index


Parts Assembly of Legs	р3
Assembly instructions Assembly of Legs	p4
Parts Ascent Series Connecting Double Modules	p5
Assembly instructions Ascent Series Connecting Double Modules	p6
Parts Ascent Series Connecting Single Modules	p7
Assembly instructions Ascent Series Connecting Single Modules	p8
Parts Ascent Series Armrest	р9
Assembly instructions Ascent Series Armrest	p10
Parts Ascent Series Table	p11
Assembly instructions Ascent Series Table	p12



Parts Ascent Series Leg Assembly

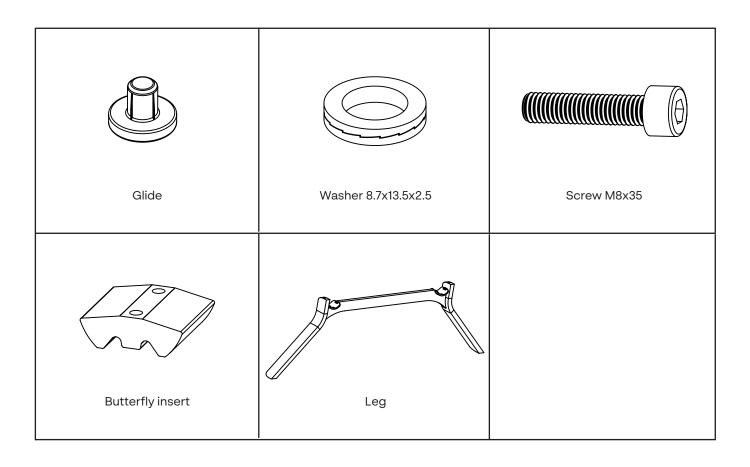


Assembly Instructions Assembly of Legs

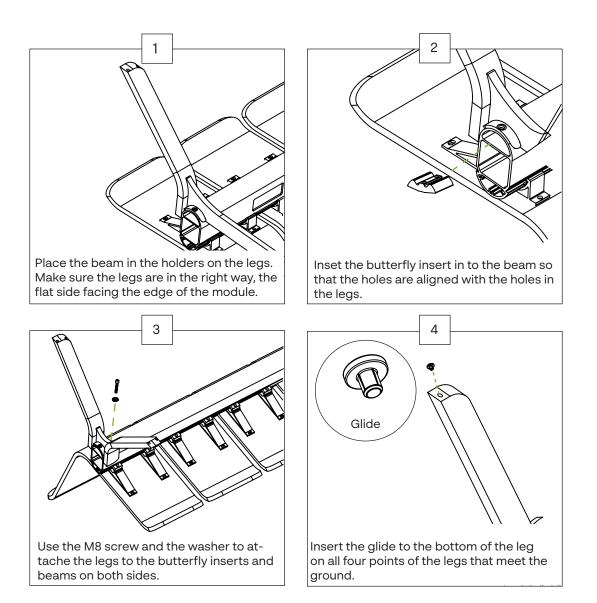




Parts Ascent Series Connecting Double Modules

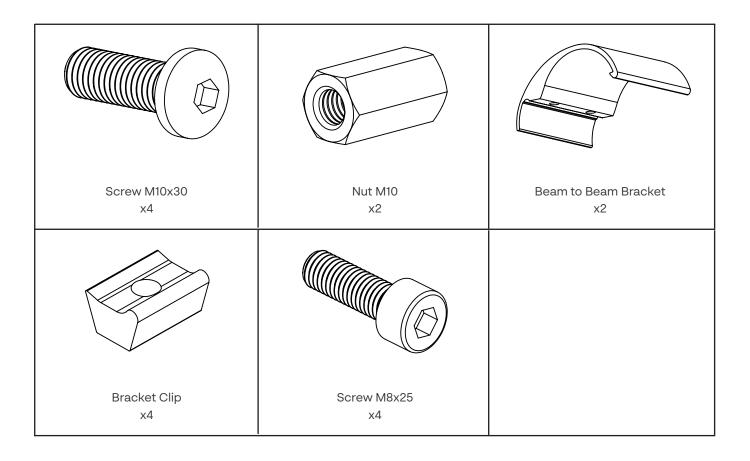


Assembly instructions Ascent Series Connecting Double Modules

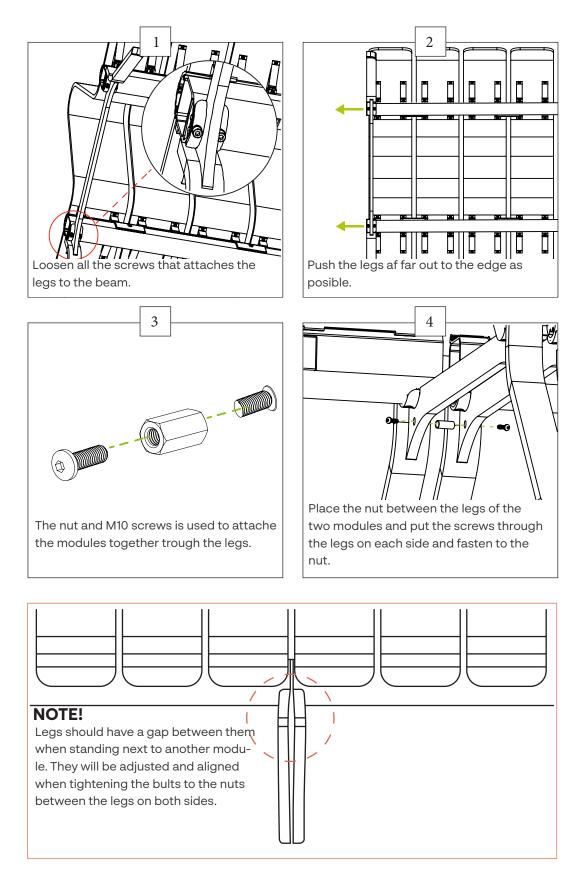




Parts Ascent Series Connecting Single Modules

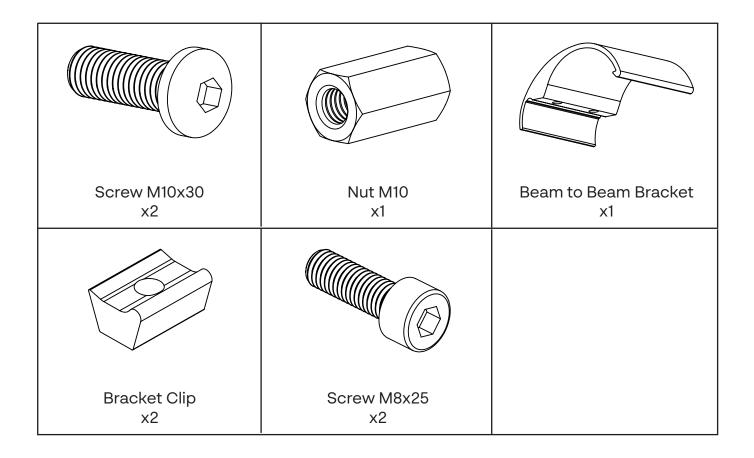


Assembly instructions Ascent Series Connecting Single Modules

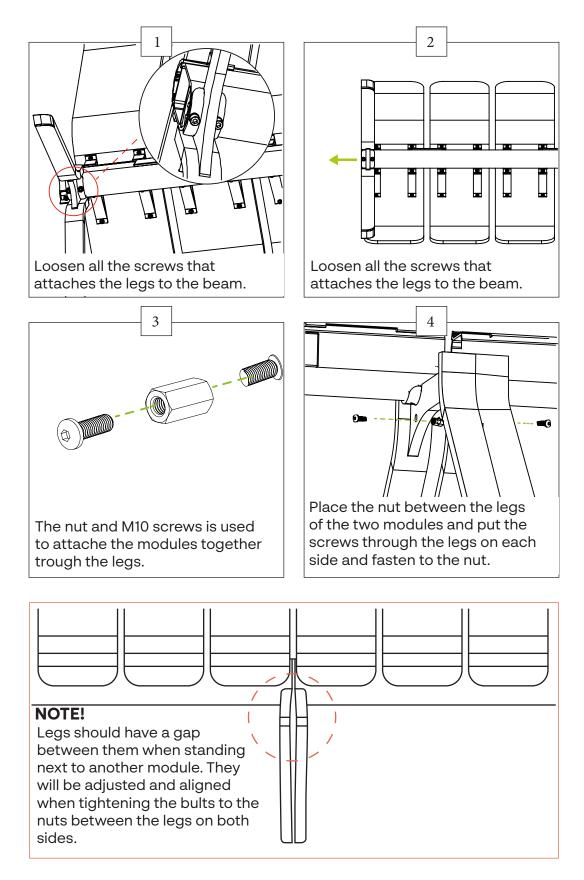




Parts Ascent Armrest

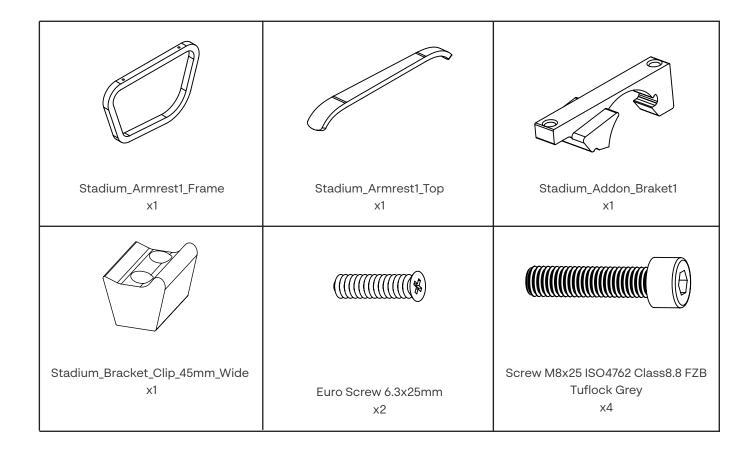


Assembly instructions Ascent Armrest

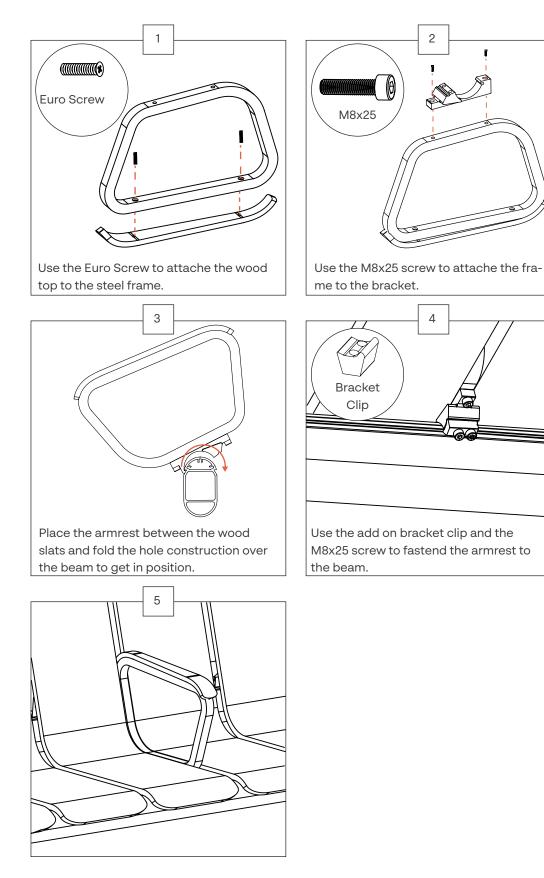



Parts Ascent Table

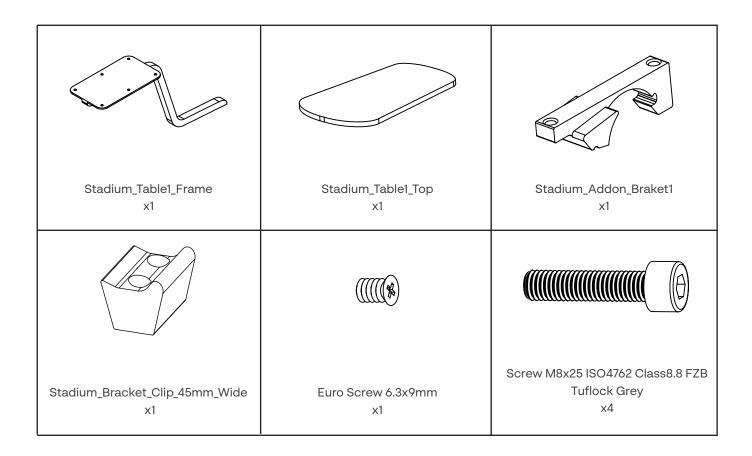

Assembly instructions Ascent Table

